



Black and Decker BDEDMT Disassembly

Prerequisite Only - Dismantling the armature.

Written By: Edgardo Gutierrez Jr



INTRODUCTION

Prerequisite Only - Identifying and unscrewing all screws that keep the armature together.



TOOLS:

- [64 Bit Driver Kit](#) (1)
-

Step 1 — Detach Matrix Attachment



 Remember to disconnect the device from all external power sources.

- To detach the matrix attachment piece, press down on the attachment release button located at the top of the device.
- Leaving your finger pressed down on the button, simply pull on the attachment to release it.

Step 2 — Remove Mounting Hardware



- Using your PH000 screwdriver with attachment J1 , unscrew seven 19mm outer screws located on the armature.
- Using the same screwdriver, unscrew the 12mm outer screw located on the armature.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-11-13 09:41:47 PM.